

User Manual

FXS Series Gateway



Contents

1. Product Introduction	4
1.1 General Information.....	4
1.2 Protocol.....	4
1.3 Hardware Specification	5
1.4 Software Specification	5
1.5 List of the Package.....	5
1.6 Appearance.....	6
2. Connection	8
2.1. Interface Description:.....	8
2.2. Indicator lights explanation:.....	9
2.3. Connection diagram:	10
3. Configuration	12
3.1. Factory setting parameters:	12
3.2. Log on to the Gateway.....	12
3.2.1. Get IP.....	12
3.2.2. Open browser and input IP.....	13
3.3 Gateway Configuration.....	15
3.3.1. User options.....	16
3.3.2. Network Configuration	18
3.3.3. Call Setting	20
3.3.3.1. H.323.....	20
3.3.3.1.1 Configuration mode	22
3.3.3.1.2. Encryption.....	22
3.3.3.2. H.323 Advanced Setting.....	23
3.3.3.3. SIP Protocol	24
3.3.3.3.1. Configuration Mode.....	26
3.3.3.3.2. SIP Advanced Configuration	27
3.3.3.3.3. Media Advanced Configuration.....	28
3.3.3.4. Firewall Traversal.....	30
3.3.3.4.1. H.323 Signaling NAT Traversal	30
3.3.3.4.2. SIP Signaling NAT Traversal	31
3.3.3.4.3. Media NAT Traversal	32
3.3.4. Phone Settings.....	33
3.3.5. Save Changes.....	33
3.3.6. Abandon changes	34
4. Tools	34
4.1. Online Upgrade.....	34

4.2. Change Password.....	35
4.3. Restore factory settings.....	35
5. Dialing Rules	36
5.1. Basic rules of grammar	36
5.2. With a limited number of digit dialing rules.....	37
6. Understand More	38
6.1. Gateway Initialization.....	38
6.2. Advanced Configuration.....	38
6.3. Notes	38

1. Product Introduction

1.1 General Information

FXS Series Gateway are the performance Gateway, which developed by DBL Co. FXS Series gateways built-in H.323 and SIP protocols. Highly reliable line detection prevents the line hanging death in the largest tent. Convenient and practical function of a broken network escape, when disconnect the network, or VOIP logon fails, FXS to mention the opportunity to jump directly to the outside PSTN. It can forward outside Caller ID Number under the SIP protocol, which is an important function of PBX application. Super Echo Cancellation Algorithm and Balanced Circuit make line echo minimum. Low price, Stable and performance are pronoun of the FXS Series products, it is the first choice of PXS Manufacturers, Call Center and System Integrators.

FXS Series mainly include HT-912T, HT-922T, HT-842R, HT-882.

1.2 Protocol

- TCP/IP V4 (IP V6 auto adapt)
- ITU-T H.323 V4 Standard
- H.2250 V4 Standard
- H.245 V7 Standard
- H.235 Standard (MD5, HMAC-SHA1)
- ITU-T G.711 Alaw/Ulaw, G.729A, G.729AB, and G.723.1 Voice Codec
- RFC1889 Real Time Data Transmission
- Proprietary Firewall-Pass-Through Technology
- SIP V2.0 Standard
- Simple Traversal of UDP over NAT (STUN)
- Web-base Management
- PPP over Ethernet (PPPOE)
- PPP Authentication Protocol (PAP)
- Internet Control Message Protocol (ICMP)
- TFTP Client
- Hyper Text Transfer Protocol (HTTP)
- Dynamic Host Configuration Protocol (DHCP)
- Domain Name System (DNS)
- User account authentication using MD5
- Out-band DTMF Relay: RFC 2833 and SIP

1.3 Hardware Specification

- ARM9E Processor
- DSP for voice codec and voice processing
- Two 10/100 Base T Ethernet ports with full compliant with IEEE 802.3
- LEDS for Ethernet port status
- Direct Connect Ethernet

1.4 Software Specification

- LINUX OS
- Built-in HTTP Web Server
- PPPOE Dial-up
- NAT Broadband Router Functions
- DHCP Client
- DHCP Server
- Firmware On-line upgrade
- PSTN Caller ID transmit
- Multiple Language Support
- Supported call divert
- Supported PSTN auto call out to PSTN
- Supported Multi-devices Cooperate Mode(Group Mode)
- Supported SMS call out

1.5 List of the Package

- a) One Gateway main unit
- b) One DC12V/500mA or DC24V/500mA power adaptor
- c) One Ethernet cable (2 M)

1.6 Appearance



HT-912T



HT-922T



HT-842R



HT-882

1) **LAN**

Connect this port to an Ethernet Switch/Router, the Ethernet of a DSL modem, or other network access equipment.

2) **PC**

Connect a computer or other network device to this port. (Less than 100 mid-range)

3) **Power**

Connect the Adapter provided to this power jack.

HT-912T DC12V/500mA

HT-922T DC12V/500mA

HT-842R DC24V/500mA


HT-882 DC24V/500mA

4) **Reset**


Reset switch, use to start the device or delete the configuration quickly.

2. Connection

2.1. Interface Description:

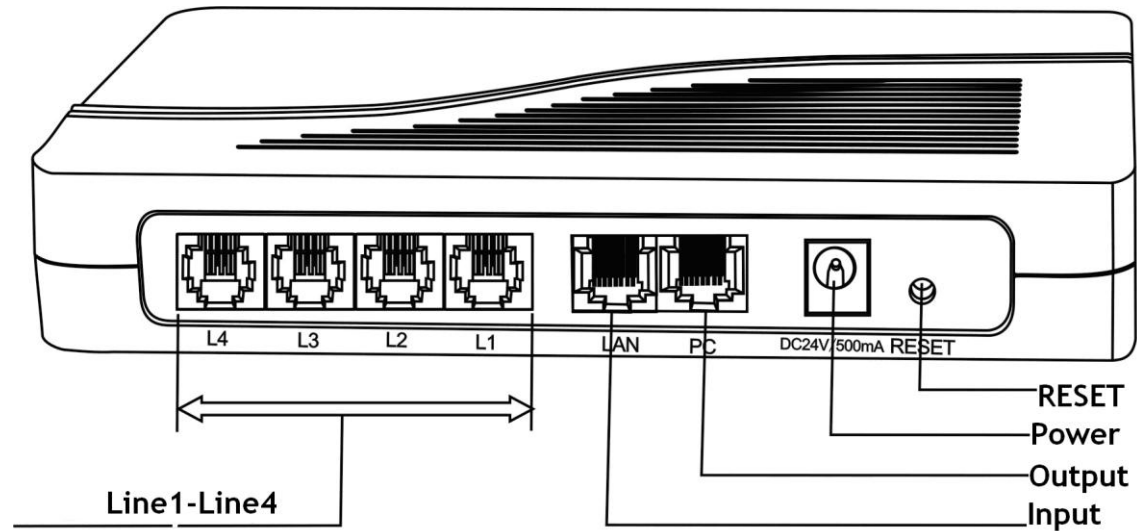

HT-842R

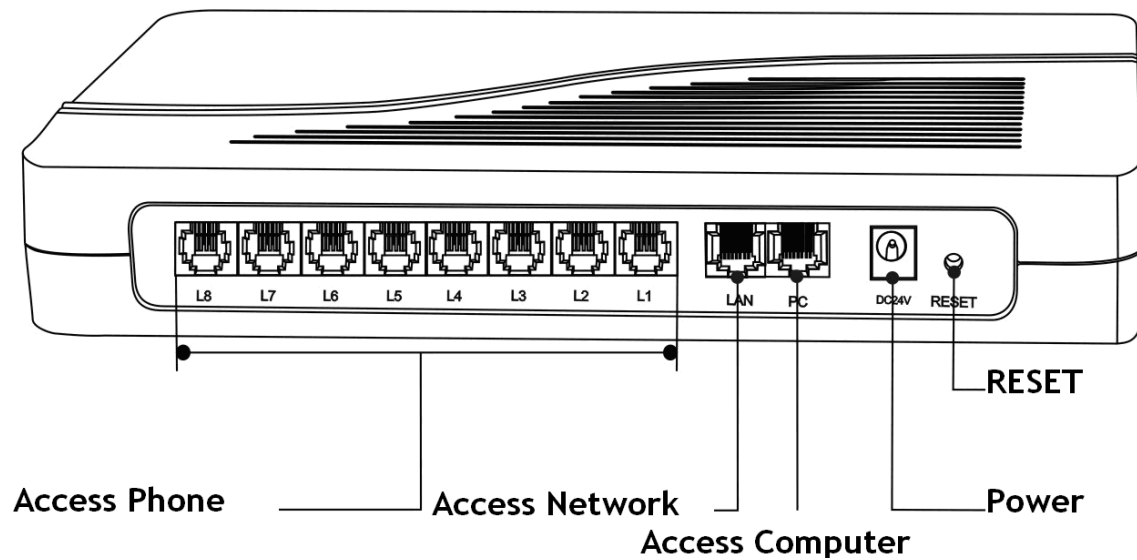

HT-882

Diagram 2-1

Interface Name	Connect to	Notes
L (1-8)	FXS Output, connected to normal phone	Length of line less than 300 meters
LAN	Network input, connected to Network	10/100Base T
PC	Network output, connected to computer	10/100Base T

DC24V	Connected to power	
RESET	Restore the factory configuration	Press(more than 10 seconds)will ok

2.2. Indicator lights explanation:


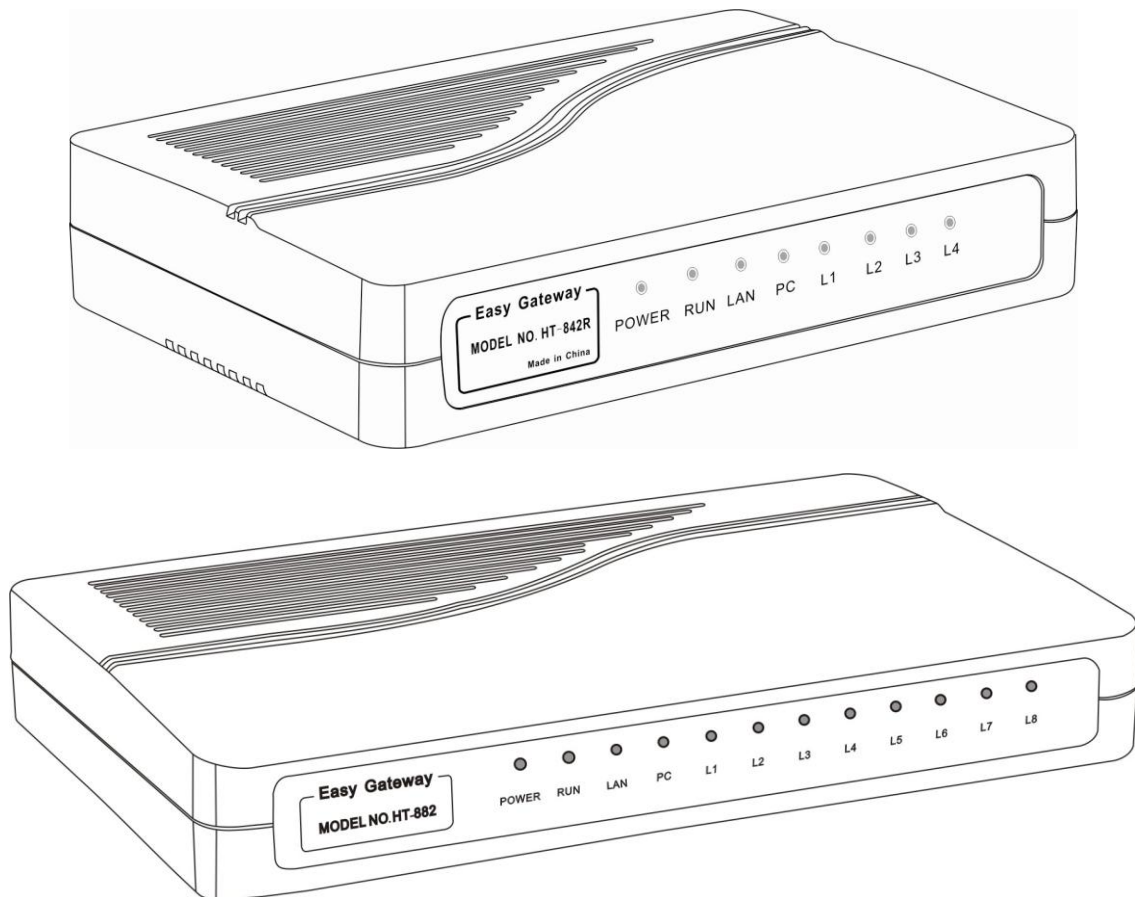



Diagram 2-2

Name	Explanation	performance
Power	Power LED	Post-Long after starting
RUN	Working status lights	Logged, flash 250 ms; login, slow flash 500 ms; upgrading, Continuous flashing 100 ms.
LAN	LAN Network Lights	Light after connect the Network, flash when Data Transmission
PC	PC Network Lights	Light after connect the Network, flash when Data Transmission
L (1-8)	Line status lights	Light after picking up the phone

2.3. Connection diagram:

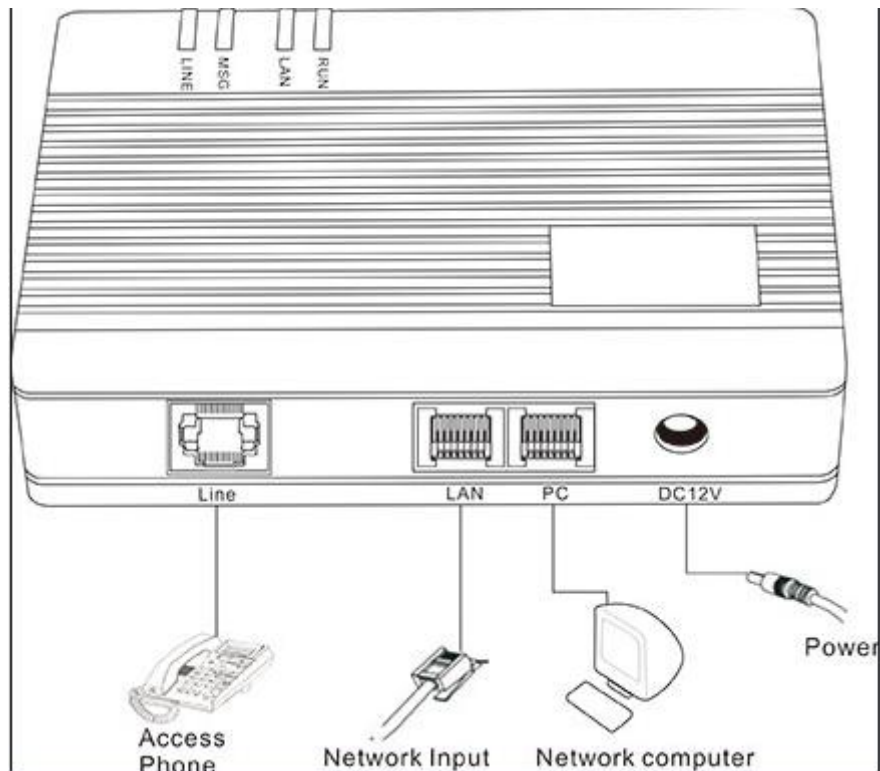

HT-912T

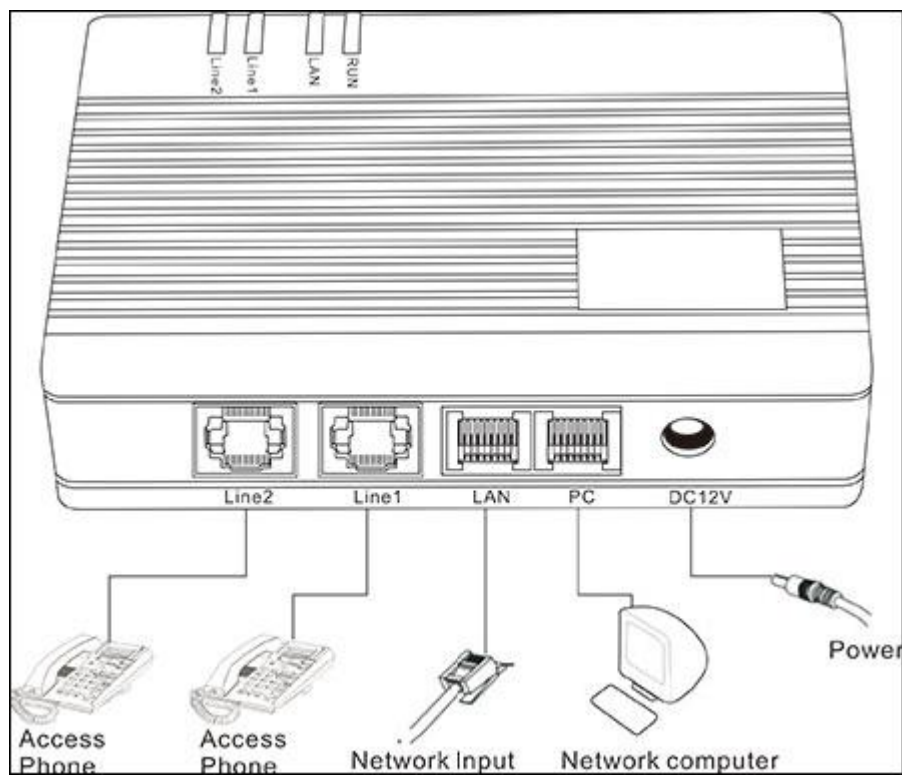

HT-922T

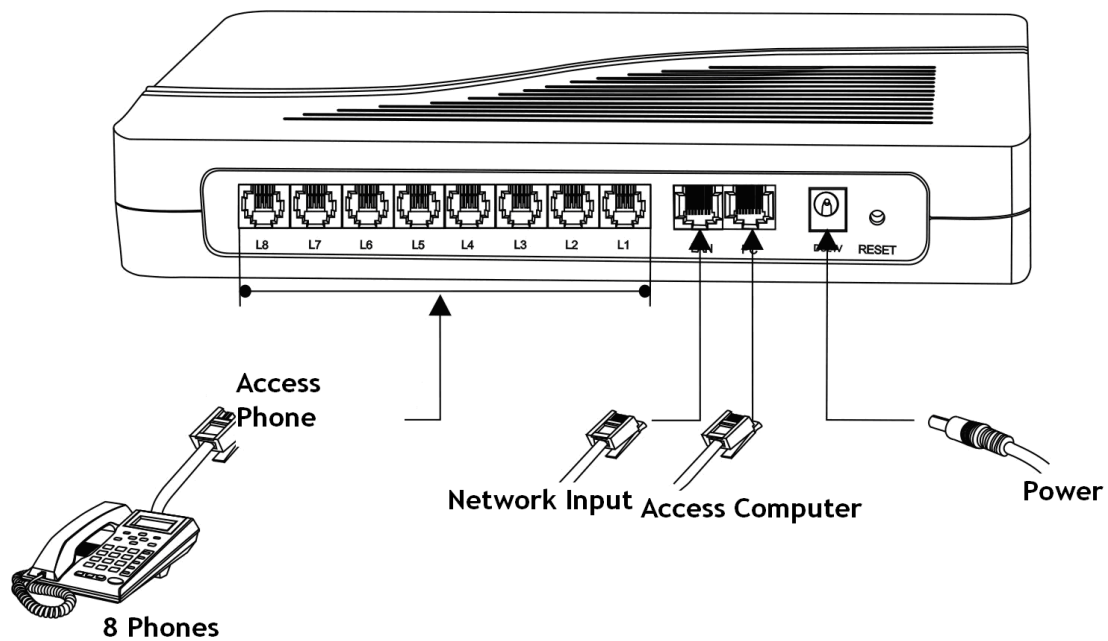
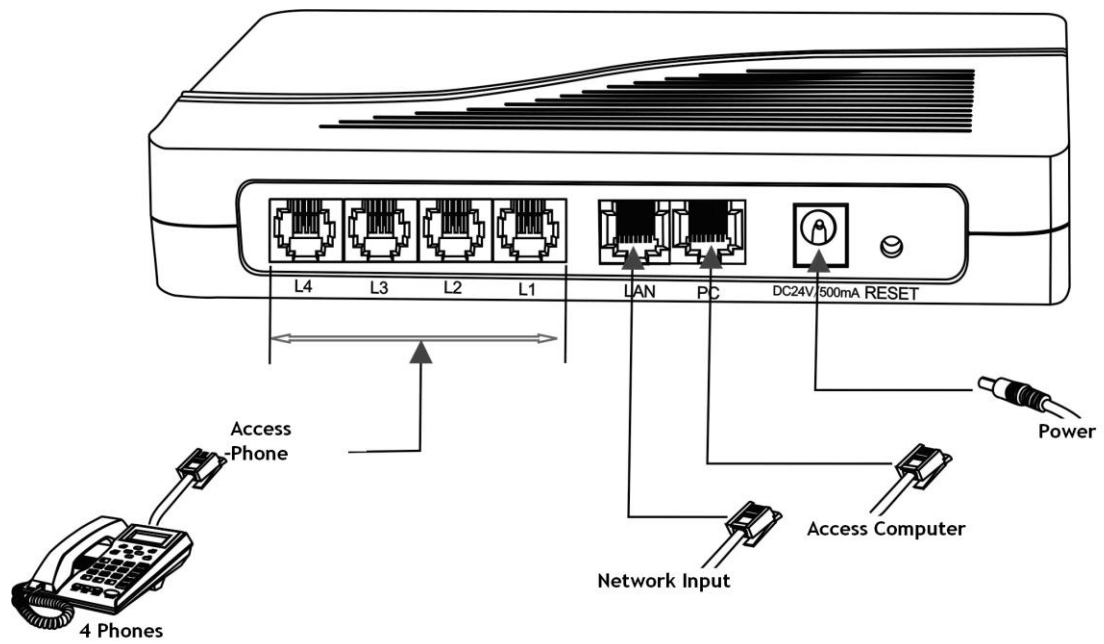


Diagram 2-3

FXS Series have a LAN port and a PC port. Please connect as follows:

1. Open the package, there are a Gateway, a power, and a cable;
2. Take out of Ethernet cable and connect to LAN port;
3. The PC supports Network share, connect to the computer or lower switch;
4. FXS is connected to normal telephone.

Make transformer output terminal.

3. Configuration

3.1. Factory setting parameters:

Parameter	Default setting	Explanation
Username	admin	
Password	admin	Please remember the password after change
LAN Network Setting	DHCP	
PC Network Setting	Static IP	192.168.8.1
LAN IP	*00(Chinese) *01(English)	Press “*00” or “*01” get IP address
LAN IP Setting	*03	Such as *03192*168*1*2#
Restore factory	*11983185922	After input password and hear “Toot”, then success, you just to pull power and restart the Gateway.

3.2. Log on to the Gateway

3.2.1. Get IP

- A) Make sure that there is DHCP sever: In accordance with connection diagram 2-3, connect the Gateway and open power , see if the RUN light flash or not. About the RUN light quick flashes 10 seconds, put up the telephone and press *00, telephone will report IP address in Chinese; Press *01, then will report in English.
- B) Without DHCP sever in the Network: Put up the telephone and press *03+IP address, such as “*03192*168*1*2#”, indicates that IP temporary address is 192.168.1.2. If you want to know how setting is successful, just to press *00 or *01 and hear the IP again. Notice that the temporary IP is not the same as the PC-segment and not conflict with other Network setting. The same PC-segment means the first three sections the number of IP must consistent, such as 192.168.8.1 and 192.168.8.5 are the same segment, 192.168.1.3 and 192.168.2.4 are not.
- C) The default IP address and mask of the PC port are 192.168.8.1 and 255.255.255.0 respectively.
Connect the computer with the PC port of the gateway through the IP address of the PC port, and set the IP of the computer to dynamic IP or fixed IP as 192.168.8.xxx and the default gateway as 192.168.8.1.



Open the Internet Explorer and enter 192.168.8.1 or http://192.168.8.1 in the address bar, then, the login page is popped up for password input. Enter the login account (“admin” as default) in the User Name, and password (“admin” as default) in the Password field.



Click “OK” button and the gateway status page is displayed as default.




GoIP Status Interface

3.2.2. Open browser and input IP

After get IP or set a segment IP, open the browser (IE), and input IP on the Address Bar.



If the connection is correct, the Web Browser will prompt you to enter the “User name” (admin) and “Password” (admin) as shown below.

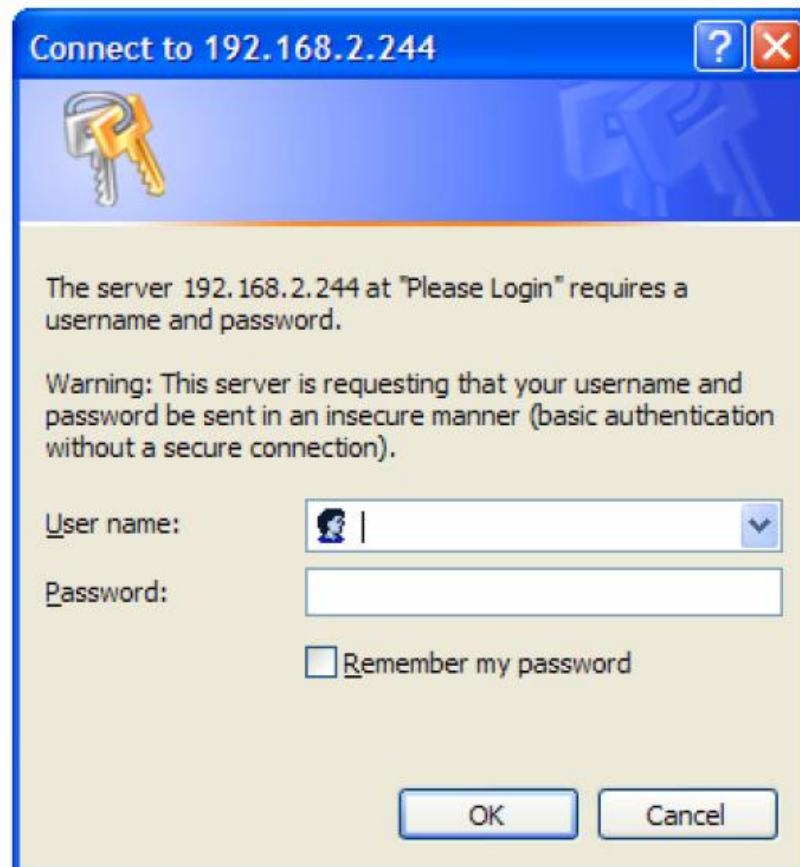

Input the username and password, enter state page, as following figure:



[简体中文](#) [繁体中文](#)

IP Phone Terminal

	Status			
Status Configurations Phone Book Tools	Phone Information	Network Information		
	Serial Number	HT912R091103824	LAN Port	192.168.2.191
	Firmware Version	A38HS-3.15-9	LAN MAC	00:11:BE:03:07:74
	Hardware Model	1fxs	PC Port	192.168.8.1
	Line Register 1 Status	LOGOUT	PPPoE	Disabled
		Default Route	192.168.2.253	
		DNS Server	202.96.134.133	

Sequence number: The Gateway factory serial number;

Software version number: FXS Series' software version. This parameters is identified by the system automatically, users can change by upgrading the Gateway;

Hardware model: Its line configuration can be identified by system software;

Line (1-8) Registration Status: Normal registration, show LOGIN, or, show LOGOUT.

LAN port: Shows the LAN IP;

LAN's Hardware address: LAN's MAC address;

PC port: Shows the PC IP;

PPPOE: Shows the status of PPPOE, Disabled or enabled;

Default route: The Gateway use;

Domain Name Server: The DNS Server of the Gateway.

3.3 Gateway Configuration

Click “Configure”, enter interface, and start to configure:

Status Configurations Preference Network Call Settings Phone Settings Save Changes Discard Changes Phone Book Tools	Preference	
	Language(语言)	简体中文
	Time Zone	GMT+8
	Time Server	pool.ntp.org
	Auto-provision	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	RemoteControl>>	
	Key(#) as Delimiter	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
	Auto-dial Timeout	5
	Network Tones	China
	INFO Server	
China Phone Code	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	
Auto Reboot	<input checked="" type="checkbox"/>	
Reboot Time	04:00	
Network Configuration		
LAN Port	DHCP	
<input type="checkbox"/> Specify DNS server		
802.1q VLAN	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	
Advanced>>		
PC Port	Static IP	
IP Address	192.168.8.1	
Subnet Mask		
DHCP Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
Starting Address	192.168.8.100	
Ending Address	192.168.8.120	
Static DNS(optional)		

3.3.1. User options

Preference	
Language(语言)	<input type="text" value="简体中文"/>
Time Zone	<input type="text" value="GMT+8"/>
Time Server	<input type="text" value="pool.ntp.org"/>
Auto Provision	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Tone Mode	<input type="text" value="China"/>
China Phone Code Matching	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Reboot Time	<input type="text" value="04:00"/>
Remote Control>>	

A) Language

Enter the language page, you can configure it. If now Chinese, you want English page, choose “English”, then click “Save change”, that is OK.

Also you can configure it with “Language option” in the upper right corner. As figure, click “English”.

Preference	
Language(语言)	<input type="text" value="简体中文"/>
Time Zone	<input type="text" value="GMT+8"/>
Time Server	<input type="text" value="pool.ntp.org"/>
Auto Provision	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

[English](#)
VoIP Gateway

B) Time Zone

According to special place to configure, device use Network Time Protocol obey the information of time and date on the server, the lag will change automatically. For example: the Pacific Standard Time is GMT-8, while Pacific daytime is GMT-7.

Preference	
Language(语言)	<input type="text" value="简体中文"/>
Time Zone	<input type="text" value="GMT+8"/>

Time Zone shows the place where users are, only fill it correctly, CND and billing information can show the right time.

C) Time Server

Server address that the Gateway get Network time by Internet. The default is: pool.ntp.org.

Time Server	<input type="text" value="pool.ntp.org"/>
-------------	-------------------------------------------

D) Auto Provision

Choose “Enable” and fill the server IP, if service provider do not support the service, then choose “Disable”, which make setting start-up speed fast.

Auto Provision	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Provision Server	<input type="text"/>
Provision Interval	<input type="text"/>

[Remote Control>>](#)

E) Remote Control

Input *20# and initiate requests by Terminals device, doing this can control the remote device. Remote control server is supported by service provider, default port is 1920, logo terminals by SN. The address and password are the same.

Remote Control<<

Remote Server	<input type="text"/>
Remote Server Port	<input type="text" value="1920"/>
Remote Server ID	<input type="text" value="{SN}"/>
Remote Server Key	<input type="text"/>
	<input checked="" type="checkbox"/> Auto Connect to Provision
Connect Port	<input type="text" value="1920"/>

As indicated in figure, fill 202.155.200.154, pick the phone and press *20#, then hear a long tone, shows succeed. Open <http://202.155.200.154:8086>, and you will see the connected Gateway model and serial number, click “serial number”, you can configure it.

Remote Control<<

Remote Server	<input type="text" value="202.155.200.154"/>
Remote Server Port	<input type="text" value="1920"/>
Remote Server ID	<input type="text" value="{SN}"/>
Remote Server Key	<input type="text"/>
	<input checked="" type="checkbox"/> Auto Connect to Provision
Connect Port	<input type="text" value="1920"/>

F) Tone Mode

It is dialing tone and ring back tone, and so on. You can choose different tone according to different countries.

Tone Mode	China
China Phone Code Matching	Australia China Hong Kong New Zealand United Kingdom United States Korea Slovenia Czechoslovakia Customized
Reboot Time	

G) China Phone Code Matching

Can match all the China phone code and make sure the fastest dial time

China Phone Code Matching	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
	<input checked="" type="checkbox"/> Auto Reboot
Reboot Time	<input type="text" value="04:00"/>

H) Reboot Time

The Gateway will reboot within the specified time, in order to clean the equipment cache, and make sure the device running normally.

☒ Auto Reboot

Reboot Time

04:00

3.3.2. Network Configuration

When you need to change the way of Network connection, you can choose “Network Configuration” and start to configure.

Access network has 3 kinds, get IP address automatically (DHCP)、Hand Set、 and PPPOE. When choose getting IP address automatically, you just to click “DHCP”, do not need to fill parameters.

When choose Hand Set, click “standard IP” and fill the IP address, mask and Gateway address. When use standard IP, you should fill in “Main DNS” server-address to get Domain Name Service, getting this address you can consult your Internet access service providers.

<div>Status</div> <div>Configurations</div> <div>Preference</div> <div>Network</div> <div>Call Settings</div> <div>Phone Settings</div> <div>Save Changes</div> <div>Discard Changes</div> <div>Phone Book</div> <div>Tools</div>	Network Configuration			
	LAN Port	Static IP	PC Port	Static IP
	IP Address		IP Address	192.168.8.1
	Subnet Mask (optional)		Subnet Mask	
	Default Route		DHCP Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
	Primary DNS		Starting Address	192.168.8.100
	Secondary DNS (optional)		Ending Address	192.168.8.120
	802.1q VLAN	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	Static DNS(optional)	
		Advanced>>		Advanced>>

When need to use PPOE, click it, and input the Username and password.

Status Configurations Preference Network Call Settings Phone Settings Save Changes Discard Changes Phone Book Tools	Network Configuration			
	LAN Port	PPPoE	PC Port	Static IP
	User Name		IP Address	192.168.8.1
	Password		Subnet Mask	
		<input type="checkbox"/> Specify DNS server	DHCP Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
	802.1q VLAN	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	Starting Address	192.168.8.100
		Advanced>>	Ending Address	192.168.8.120
			Static DNS(optional)	
				Advanced>>

When use PPOE, need to enable Gateway routing, so that the PC that connected to the Gateway can connect to the Internet correctly. Change the PC Bridge Mode into Standard IP, configure as follows:

Network Configuration			
LAN Port	Static IP	PC Port	Static IP
IP Address	192.168.2.245	IP Address	192.168.8.1
Subnet Mask (optional)	255.255.255.0	Subnet Mask	255.255.255.0
Default Route	192.168.2.3	DHCP Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Primary DNS	202.96.134.133	Starting Address	192.168.8.10
Secondary DNS (optional)	202.96.168.68	Ending Address	192.168.8.100
802.1q VLAN	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	Static DNS(optional)	202.96.134.133
	Advanced>>		Advanced>>

PC port enables standard IP, the mask 2555.2555.2555.0, after enable DHCP, the computer that connected to the PC port can get arbitrary IP in the range of start address and end address.

Notes: The PC IP could not exist in the same segment with the LAN, in case of conflict.

3.3.3. Call Setting

3.3.3.1. H.323




The screenshot shows the 'EasyPhone IP Phone Test' web interface. On the left is a sidebar with a 'Status' link and a 'Configurations' section containing links for 'Preference', 'Network', 'Call Settings', 'Phone Settings', 'Save Changes', 'Discard Changes', 'Phone Book', and 'Tools'. The 'Call Settings' link is selected. The main content area is titled 'Call Settings' and contains the following fields:

- Endpoint Type: H.323 Phone (dropdown)
- Endpoint Mode: Gatekeeper Mode (dropdown)
- Config Mode: Single Config (dropdown)
- Phone Number: (empty text box)
- Display Name: (empty text box)
- H.323 ID: (empty text box)
- Gatekeeper Address: (empty text box)
- ☐ Enable VOS/AVS Encryption
- ☐ Enable Authentication
- Dial Plan: (empty text box)
- Fax Line>> (link)

Click “Call Settings”, expand the page, configure all the parameters:

1. Choose the terminal mode H.323
2. Fill login information: Server address, Gatekeeper address, telephone number, H.323 ID. If need to fill certification information, please click “Enable Authentication”, and fill the certification account and password.

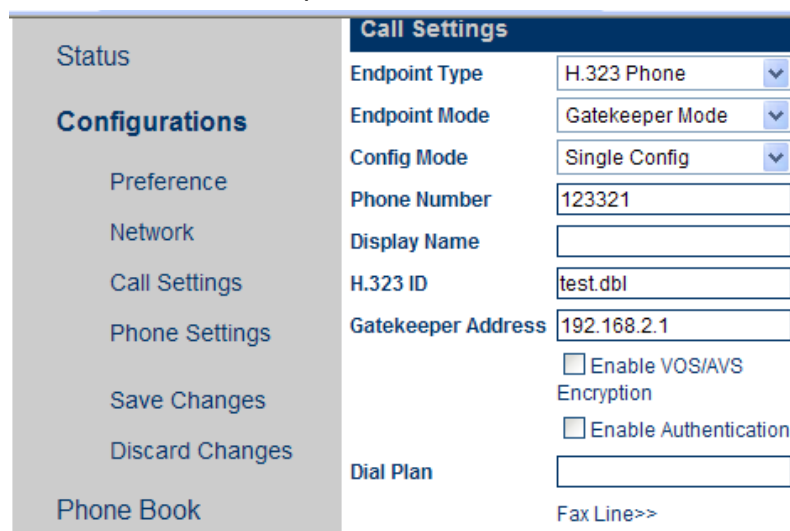

This screenshot shows the 'Call Settings' page with the following values entered:

- Endpoint Type: H.323 Phone
- Endpoint Mode: Gatekeeper Mode
- Config Mode: Single Config
- Phone Number: 123321
- Display Name: (empty)
- H.323 ID: test.dbl
- Gatekeeper Address: 192.168.2.1
- ☐ Enable VOS/AVS Encryption
- ☐ Enable Authentication
- Dial Plan: (empty)
- Fax Line>> (link)

Single Configure

Status Configurations Preference Network Call Settings Phone Settings Save Changes Discard Changes Phone Book	Call Settings	
	Endpoint Type	H.323 Phone
	Endpoint Mode	Gatekeeper Mode
	Config Mode	Config by Line
	<input checked="" type="radio"/> Line 1 <input type="radio"/> Line 2 <input type="radio"/> Line 3 <input type="radio"/> Line 4 <input type="radio"/> Line 5 <input type="radio"/> Line 6 <input type="radio"/> Line 7 <input type="radio"/> Line 8	
	Phone Number	121
	H.323 ID	dbl.dbl
	Gatekeeper Address	192.169.2.1
	<input type="checkbox"/> Enable VOS/AVS Encryption <input type="checkbox"/> H.235 Auth	
	Dial Plan	

Configure by Line

Status Configurations Preference Network Call Settings Phone Settings Save Changes Discard Changes Phone Book Tools	Call Settings	
	Endpoint Type	H.323 Phone
	Endpoint Mode	Gatekeeper Mode
	Config Mode	Config by Group
	<input checked="" type="radio"/> Group 1 <input type="radio"/> Group 2 <input type="radio"/> Group 3 <input type="radio"/> Group 4 <input type="radio"/> Group 5 <input type="radio"/> Group 6 <input type="radio"/> Group 7 <input type="radio"/> Group 8	
	Phone Number	2221
	H.323 ID	
	Gatekeeper Address	192.168.2.1
	<input type="checkbox"/> Enable VOS/AVS Encryption <input type="checkbox"/> H.235 Auth	
	Dial Plan	

Activated Lines in Group 1

☒ L1
 ☒ L2
 ☒ L3
 ☒ L4
 ☒ L5
 ☐ L6
 ☐ L7
 ☐ L8

Fax Line>>

Configure by Group

3. As indicated in Figure, when choose H.323 protocol, you should choose “H.323 Terminal”. When several lines use the same number, choose “Single server mode”, when each line choose different numbers, choose “By wiring”. When choose “By wiring”, each line can login to different servers.

A) H.323 telephone number

Composed by a group of decimal number, use to certain the number in the Network. For example, 5551234 is effective number, input this number in the bank. When login with telephone number, fill it; when login with number, you will hear dial-tone, then dial again.

B) H.323 ID

A mode of account certification, users can fill according to the service provider.

C) Gatekeeper address

Use to find right Gatekeeper, fill the IP: 192.168.2.1 or domain: **gk yourisp.com**.
If your port is not the standard (1719, 1720), you can add the special port in the back of the IP or domain, for example: login with 7300: 192.168.2.1:7300 or **gk yourisp.com:7300**.

Notes: Any character of the parameters should be filled with ASCII.

D) Use authentication

Click “Enable authentication”, fill the bank in the corresponding option.

E) Dialing Rules

Please refers to “Dialing Rules”

F) Line Fax

Not support.

3.3.3.1.1 Configuration mode

The configuration mode of FXS VOIP channel: 1) Single configure; 2) Configure by line; 3) Configure by group

Call Settings	
Endpoint Type	H.323 Phone
Endpoint Mode	Gatekeeper Mode
Config Mode	Single Config
Phone Number	Single Config
Display Name	Config by Line

A) **Single Configure:** User can make several VOIP channel share the same configuration.

B) **Configure by line:** Every VOIP channel can be supported service by different providers, also login 2 or 4 telephone numbers on the same server, each number is bundled with corresponding VOIP channel.

C) **Configure by group:** In this mode, each group can bundled one or several lines, each line can exist in different groups. That is each line could login on 4 servers.

Notes: The special settings of 3 configuration mode refer to FXS configuration

3.3.3.1.2. Encryption

The Gateway is compatible of encryption of VOS and AVS, if need password, please enable it.

☒ Enable VOS/AVS Signaling Encryption

Encryption Mode

H.235 ID

VOS Signaling Encry

VOS Signaling Encryption

VOS Signaling And Media

AVS Signaling Encryption

AVS Signaling And Media

- A) VOS Signaling Encryption: Only make encryption on signaling.
- B) VOS Signaling and Media Encryption: Make encryption on the signaling and media.
- C) AVS Signaling Encryption: Only make encryption on signaling.
- D) AVS Signaling and Media Encryption: Only make encryption on signaling.

Notes: The 4 encryption modes only effective on VOS or AVS users, if you use other platform, you could use Firewall-penetrating technology Relay Agent by DBL. Special details .please refer to Firewall-penetrating.

3.3.3.2. H.323 Advanced Setting

FXS Gateway's advanced option, correspond "Advanced" and "Media". Click "Advanced", the page as following:

Advanced<<

RAS Port	<input type="text"/>
Q.931 Port	<input type="text"/>
H.245 Port	<input type="text"/>
Fast Start	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Register Mode	Register Multiple Nur <input type="button" value="v"/>
DTMF Signaling	Outband <input type="button" value="v"/>
Signaling QoS	None <input type="button" value="v"/>
Signaling NAT Traversal	None <input type="button" value="v"/>

Media Settings>>

A) RAS Port

RAS is communications protocol of Terminal and Gatekeeper, and state information of transferring login information, login information, broadband, and the relationship of the 2 H.323. This option can designate the UDP of this protocol, can be used by the router's port mapping.

B) Call signaling port (Q.931)

H.225-Q931 is call-control protocol of H.323, use to transfer the call-setting and uninstall information between the 2 H.323. This option can designate the terminal that receive the calling from Q.931 port, can be used by the router's port mapping.

C) Media Control Port (H.245 Port)

H.245 is media control port of H.323. This option can designate the Terminal that receive the calling from port connected to H.245, can be used by the router's port mapping.

D) Quick Connect

Use to check and solve compatibility problems. If uncertain, do not choose this

option.


E) Registration Mode

Use to compatible different PBX, do not need to configure under normal circumstances.



F) DTMF Signaling

By using DTMF, the telephone transfer phone-signal to call clearinghouse by audio tape. That is to say, two different frequencies of sound are combined into 16 kind of tone. Telecommunications or telecom service hotline like 1860 identifies these special sounds by DSP, which use to certain the dial-number. DTMF has 2 styles: Inband and Outband.

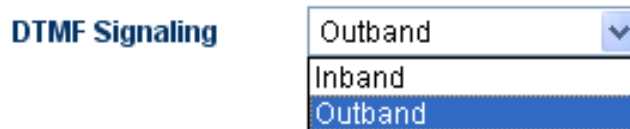

1) Inband DTMF

This style makes the special dial-tone together with talk-tone and transfer out without any treatment. So Inband only has one way to set DTMF signaling.

2) Outband DTMF

This style uses special methods and transfers the dial-tone to certain the correctness. The special methods are the called protocol, such as RFC2833.

G) QOS Signaling

QOS is network quality of service and ability of higher priority service that network supports, including dedicated broadband, control and delay jitter, packet loss rate improvement and so on. This option can label for QOS which is designated by call signaling packets, in order to improve the network quality of service.

3.3.3.3. SIP Protocol

SIP (Session Initiation Protocol) is identified by IETF, use to create, change and release the session of one or several participants. These sessions are like Internet Multimedia Conference, IP phone or Multimedia Distribution. The session participants could communicate by Multicast, Mesh Unicast, or mixture of the two.

If use SIP protocol, choose SIP Terminal, and enter SIP configuration page.

Call Settings	
Endpoint Type	SIP Phone
Config Mode	Single Server Mode
Phone Number	121
Phone Number 2	
Display Name	
SIP Proxy	192.168.2.1
SIP Registrar Server	192.168.2.1
Register Expiry(s)	60
Outbound Proxy	
Home Domain	
Authentication ID	121
Password	•••••
Dial Plan	
Call Forward Type	Not Forward
Call Forward Number	
Backup Server	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

Single Server Mode

Call Settings	
Endpoint Type	SIP Phone
Config Mode	Config by Line
<input checked="" type="radio"/> Line 1 <input type="radio"/> Line 2 <input type="radio"/> Line 5 <input type="radio"/> Line 6 <input type="radio"/> Line 7 <input type="radio"/> Line 8	Single Server Mode Config by Line
Phone Number	121
Phone Number 2	
Display Name	
SIP Proxy	192.168.2.1
SIP Registrar Server	192.168.2.1
Register Expiry(s)	60
Outbound Proxy	
Home Domain	
Authentication ID	121
Password	•••
Dial Plan	
Call Forward Type	Not Forward
Call Forward Number	
Backup Server	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

Configure by Line

A) Telephone number

Use to fill numbers of this line. This number indicates that called is the only parameter identification.

- B) Display Name**
When you call your friend John, then his phone will show you call.
- C) SIP Proxy**
Use to fill address of SIP Proxy. If your SIP Proxy is special port (is not the default 5060), you can notes in the back of IP Proxy or Domain. Such as: 192.168.2.1:5070 or tester.com.cn:5070.
- D) SIP Registration Server**
Use to register account for the Gateway, and fill the IP or Domain of SIP Registration Server. If your server is special port (is not the default 5060), you can notes in the back of IP Proxy or Domain. Such as: 192.168.2.1:5070 or tester.com.cn:5070.
- E) Outbound Proxy**
Exist in the firewall/NAT. It is used to make signaling and stream can penetrate the firewall.
- F) Ownership of the domain**
Use to manage the Domain Management Host of SIP protocol.
- G) Certification ID**
Use to fill the certification account that the Gateway logins on the SIP registration server.
- H) Password**
Use to fill the certification password when the Gateway logins on the SIP registration server.
- I) Dialing Rules**
Please refer to “Dialing Rules”.
- J) Backup Server**

	<input checked="" type="checkbox"/> Backup Server
Backup SIP Proxy	<input type="text"/>
Backup SIP Registrar Server	<input type="text"/>
Backup Home Domain	<input type="text"/>
FXO Calling Settings>>	

Use to register backup, when user have a Backup registration server, then can choose this option. If the Backup registration server is enable, while the main server is failure unexpectedly, the Gateway will register to the Backup server automatically.

- K) Line Fax**
Not support.

3.3.3.3.1. Configuration Mode

The configuration mode of FXS VOIP channel: 1) Single configure; 2) Configure by line; 3) Configure by group

Call Settings	
Endpoint Type	H.323 Phone
Endpoint Mode	Gatekeeper Mode
Config Mode	Single Config
Phone Number	Single Config
Display Name	Config by Line
	Config by Group

- A) **Single Configure:** User can make several VOIP channel share the same configuration.
- B) **Configure by line:** Every VOIP channel can be supported service by different providers, also login 2 or 4 telephone numbers on the same server, each number is bundled with corresponding VOIP channel.
- C) **Configure by group:** In this mode, each group can bundled one or several lines, each line can exist in different groups. That is each line could login on 4 servers.

Notes: The special settings of 3 configuration mode refer to FXS configuration

3.3.3.3.2. SIP Advanced Configuration

SIP advanced option, correspond “Advanced” and “Media”. Click “Advanced” and “Media”, the page as following:

A) Signaling Port

SIP local port is the local UDP port, use to communicate with SIP proxy or other SIP users.

B) NAT Keep

Use to keep the port when NAT communicate with SIP signaling, its unit is seconds.

C) DTMF Signaling

By using DTMF, the telephone transfer phone-signal to call clearinghouse by audio tape. That is to say, two different frequencies of sound are combined into 16 kind of tone. Telecommunications or telecom service hotline like 1860 identifies these special sounds by DSP, which use to certain the dial-number. DTMF has 2 styles: Inband and Outband.

DTMF Signaling
Outband
Inband
Outband

1) Inband DTMF

This style makes the special dial-tone together with talk-tone and transfer out without any treatment. So Inband only has one way to set DTMF signaling.

2) Outband DTMF

This style uses special methods and transfers the dial-tone to certain the correctness. The special methods are the called protocol, such as RFC2833.

DTMF Signaling	Outband
Outband DTMF type	RFC 2833
RTP Payload Type	RFC 2833
	SIP INFO

D) QOS Signaling

QOS is network quality of service and ability of higher priority service that network supports, including dedicated broadband, control and delay jitter, packet loss rate improvement and so on. This option can label for QOS which is designated by call signaling packets, in order to improve the network quality of service.

Signaling QoS	None
	None
	IP TOS
	DiffServ

E) Signaling Encryption

- a) None: Not encrypted.
- b) RC4: This is a variable key length stream encryption algorithm clusters, its S-box is random, generally 256 bytes.
- c) Fast: a long delay for high-speed networks, TCP Congestion Control Protocol, require server-side support.
- d) VOS: For VOS users.
- e) AVS: For AVS users.
- f) N2C: For N2C users.
- g) ECM: For ECM users.
- h) ET263: For ET263 users.

F) NAT Signaling Penetration.

Special configurations please refer to firewall.

3.3.3.3.3. Media Advanced Configuration

Media Advanced Configuration Aimed at the gateway RTP media stream part of the advanced configuration options, click “Media” in the “call setting”.

A) KTP Port (range)

Use to designate the UDP of Real-Time Media Transfer Protocol (RTP), used with the router’s port mapping.

Notes: The terminal use several pairs of RTP, its value is the port range, such as (5500-5520).

B) RTP Packet Length

The default time length of each wet packet is 20ms. Use to designate the size of

media-packet, the unit is sampling time ms.

C) Jitter delay processing mode

Jitter Buffer	Fixed
Delay(ms)	Adaptive
Media QoS	Sequential
	Fixed

Use to designate Jitter delay buffer algorithm model. Adaptive mode is the best, other modes are used for test, please do not use in the practical action.

D) Media Encryption

Media Encryption	None
Media NAT Traversal	None
	RC4 Encryption
	ET263

- a) **None:** Not encrypted.
- b) **RC4:** This is a variable key length stream encryption algorithm clusters, its S-box is random, generally 256 bytes.
- c) **ET263:** For ET263 users.

E) Media QOS

QOS is network quality of service and ability of higher priority service that network supports, including dedicated broadband、control and delay jitter、packet loss rate improvement and so on. This option can label for QOS which is designated by call signaling packets, in order to improve the network quality of service.

Signaling QoS	None
	None
	IP TOS
	DiffServ

F) Speech coding and sequencing

Audio Codec Preference<<	
UP	<input checked="" type="checkbox"/> alaw
DOWN	<input checked="" type="checkbox"/> ulaw
	<input checked="" type="checkbox"/> g729
	<input checked="" type="checkbox"/> g729a
	<input checked="" type="checkbox"/> g729ab
	<input checked="" type="checkbox"/> g7231
	<input checked="" type="checkbox"/> gsm

【 ✓ 】 indicate that coding is available, UP and DOWN on the currently selected voice compression coding to adjust priorities


3.3.3.4. Firewall Traversal

In the advanced configuration of call settings, signal and media each has firewall configuration.

3.3.3.4.1. H.323 Signaling NAT Traversal

There are four styles as follows:

Signaling NAT
Traversal

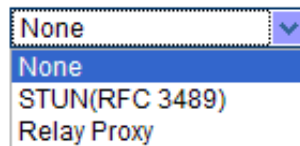

None	▼
None	
STUN(RFC 3489)	
Relay Proxy	

A) **None**

Select **None** to turn off this feature.

B) **Nat Citron**


Citron is a dedicated firewall penetration agreement for GNUGK.

C) **Port Transparent/DMZ**

Port Transparent refers that put network port of the LAN into computer or inside of the LAN. The actual servers allow external users enjoy the servers of internal server(FTP、HTTP、Telnet) .

Port Transparent includes the Gateway address and response server address. Gateway is communications equipment that connect two different networks, response to the server is standard service equipment that perform ECHO protocol.

Signaling NAT
Traversal

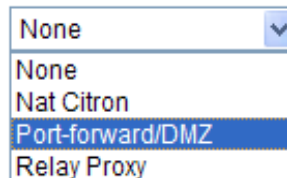

None	▼
None	
Nat Citron	
Port-forward/DMZ	
Relay Proxy	

D) **Relay proxy**

Relay proxy is a proprietary NAT traversal technology. It includes relay proxy server address, port, username, and password.

Relay proxy makes encryption on the Gateway's communication, this function need the support of DBL. technology.

Signaling NAT Traversal	Relay Proxy
Address	202.96.136.145
Port	21080
User	111
Password	...
	<input checked="" type="checkbox"/> Encryption
Relay Mode	1

3.3.3.4.2. SIP Signaling NAT Traversal

SIP Signaling NAT Traversal has 3 kinds:

Signaling NAT Traversal	<div>None</div> <div>None</div> <div>STUN(RFC 3489)</div> <div>Relay Proxy</div>
-------------------------	----------------------------------------------------------------------------------

A) None

Select **None** to disable this feature.

B) STUN (RFC 3489)

STUN (Simple Traversal of UDP (User Datagram Protocol) through NATS (Network Address Translators)) is a network protocol allowing a client behind a NAT (or multiple NATS) to find out its public address, the type of NAT it is behind and the internet-side port associated by the NAT with a particular local port.

Select STUN (RFC 3489) to use a STUN server for Signaling NAT Traversal. Enter the IP address or the domain name of the STUN server to be used.

Signaling NAT Traversal	STUN(RFC 3489)
STUN Server	

C) Relay Proxy

Relay proxy is a proprietary NAT traversal technology. Please consult your service provider for more information. It includes relay proxy server address, port, username, and password.

Relay proxy makes encryption on the Gateway's communication, this function need the support of DBL. technology.

Currently, the following 3 kinds of packaging mechanism are supported.

Signaling NAT Traversal	Relay Proxy
Address	202.96.136.145
Port	21080
User	111
Password	...
	<input checked="" type="checkbox"/> Encryption
Relay Mode	1

3.3.3.4.3. Media NAT Traversal

Similar to Signaling NAT Traversal, this feature allows media packets (RTP) to be routed properly in various network environments.

Media NAT Traversal	None
	None STUN(RFC 3489) Port-forward/DMZ Relay Proxy

A) NONE

Select **None** to disable this feature.

B) Port Transparent/DMZ

Port Transparent refers that put network port of the LAN into computer or inside of the LAN. The actual servers allow external users enjoy the servers of internal server(FTP、HTTP、Telnet).It contains Gateway address and the responding to the server's address. Gateway is communications equipment that connect two different networks, response to the server is standard service equipment that perform ECHO protocol.

C) STUN(RFC3489)

STUN (Simple Traversal of UDP (User Datagram Protocol) through NATS (Network Address Translators)) is a network protocol allowing a client behind a NAT (or multiple NATS) to find out its public address, the type of NAT it is behind and the internet-side port associated by the NAT with a particular local port.

Select STUN (RFC 3489) to use a STUN server for Signaling NAT Traversal. Enter the IP Address or the domain name of the STUN server to be used.

D) Relay Proxy

Relay proxy is a proprietary NAT traversal technology. Please consult your service provider for more information.

Currently, the following 3 kinds of packaging mechanism are supported:

- **Mode 1:** The media uses UDP packets and (or) encrypt with multiple UDP port;
- **Mode 2:** The media uses UDP packets and (or) encrypt with single UDP port;
- **Mode 3:** The media uses TCP packets and (or) encrypt (UDP over TCP).

3.3.4. Phone Settings

Status	Phone Settings
Configurations	PhoneBook Function <input type="text" value="*50"/>
Preference	FXS 48v Standby <input type="radio"/> Enable <input checked="" type="radio"/> Disable
Network	Billing Support <input type="radio"/> Enable <input checked="" type="radio"/> Disable
Call Settings	Ring Parameters>>
Phone Settings	
Save Changes	
Discard Changes	
Phone Book	

A) **PhoneBook Function:** Configure *50, you can use PhoneBook, if you need to dial first number on PhoneBook, press *501#.

B) **FXS 48v Standby:** Use when standby.

C) **Billing Support:** Enable the call hold, with the HOLD key to use.

Billing Support	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Billing Server	<input type="text"/>
Billing Version	V2.0 <input type="button" value="v"/>
	Ring Parameters>>

3.3.5. Save Changes

When you finish settings, click “save change” save all the settings.

Status	Preference
Configurations	Language(语言) <input type="text" value="简体中文"/>
Preference	Time Zone <input type="text" value="GMT+8"/>
Network	Time Server <input type="text" value="pool.ntp.org"/>
Call Settings	Auto-provision <input type="radio"/> Enable <input checked="" type="radio"/> Disable
Phone Settings	RemoteControl>>
Save Changes	Key(#) as Delimiter <input checked="" type="radio"/> Enable <input type="radio"/> Disable
Discard Changes	Auto-dial Timeout <input type="text" value="5"/>
	Network Tones <input type="text" value="China"/>
	INFO Server <input type="text"/>
	China Phone Code <input type="radio"/> Enable <input checked="" type="radio"/> Disable
	Auto Reboot <input checked="" type="checkbox"/>
	Reboot Time <input type="text" value="04:00"/>
	Network Configuration
	LAN Port <input type="text" value="PPPoE"/>
	PC Port <input type="text" value="Static IP"/>

3.3.6. Abandon changes

If your new settings are not saved, you can clean all the unsaved new parameters.

The screenshot shows the configuration interface of the OSS-3.03-10 device. On the left is a sidebar with 'Status' and 'Configurations' sections. Under 'Configurations', there are links for 'Preference', 'Network', 'Call Settings', 'Phone Settings', 'Save Changes', and 'Discard Changes' (which is circled in red). The main area is divided into two sections: 'Preference' and 'Network Configuration'. The 'Preference' section includes settings for Language (Simplified Chinese), Time Zone (GMT+8), Time Server (pool.ntp.org), Auto-provision (Disabled), Key(#) as Delimiter (Enabled), Auto-dial Timeout (5), Network Tones (China), INFO Server, China Phone Code (Disabled), Auto Reboot (checked), and Reboot Time (04:00). The 'Network Configuration' section includes LAN Port (PPPoE), PC Port (Static IP), and IP Address (192.168.8.1). There is also a checkbox for 'Specify DNS server'.

4. Tools

4.1. Online Upgrade

The screenshot shows the 'Online Upgrade' page. It displays the 'Last Upgrade Time' as 2009-12-16 10:33:44 and the 'Current Version' as OSS-3.03-10. There is a text input field for the 'Upgrade Site' with the address '192.168.2.1/update/OSS-3.03-10.pkg' and a 'Start' button.

Page shows current version information, input upgrade address, click start, wait after upgrade and start again. When the page shows “Upgrade successful”, click “OK”.

Notes: Please keep in touch with the company’s technology support, in case that get the latest information and upgrade address.

4.2. Change Password

User Level
New Password:
Confirm Password:

Administration Level
New Password:
Confirm Password:

Include “Ordinary user-level” (user) and “Administrator Class” (admin), input the new password two times, click “change” is ok.

4.3. Restore factory settings



If you make sure that clean all configurations, click “OK”, wait start again. If not, click “Cancel”, back to current page.

Notes: All the users' personal configuration include new changed password will be cleaned.

You also finish these by pressing “RESET” in a long time.

4.4. Reboot the system



If you are sue to reboot the system, click “OK”, if not, then click “Cancel”, back

to current page. Point the “RESET” gently with Small needle-like objects, the Gateway will reboot.

Notes: Press the “RESET” will lead HTM_442 restore factory settings, all the parameters that users configure will be cleaned.

5. Dialing Rules

Dialing rules make users configure number rules flexible, its expressions are:

Prefix: Action | Prefix: Action

Prefix is in front of the called number. “:” is Actions associated with Fu. “|” is Separator, separates different prefix. Matching sequence is longest match.

For example: the Gateway is connected to extension line, fill “0755:-0755+9, | 07551:-0755” in PSTN, which indicates that dial 0755 Gateway, deleted (-0755) dial “9” to get outside line, then dial the remaining numbers after 0.5 seconds. If Dial 07551, which indicates that you dial inside number, the Gateway will dial the extension number.

Dial Plan

0:|13:+0|[2-8]:+0755

5.1. Basic rules of grammar

1. Rules can be separated by “|”, such as “00:-00|0:-0+86|:+86755”
2. Rules are matched by Sit-to-right, when encounter appropriate one, end the match immediately, or continue next one.
3. Syntax rules is “AA: -aa+bb”, such as “0:-0+86”, “AA” is the matching numbers, in the back of the colon is the corresponding concrete operation. If succeed, minus “aa” and “bb”, if not, continue next one. If the back of colon without operation, such as “00:”, do not make any operation and exit. If in front of the colon without string, such as “:+86755”, do operation.
4. Dialing rules have no range, its syntax rule is “[A-B]A:-aa+bb” or “A[A-B]:-aa+bb”. For example: The range of 2 to 8 is that: “[2-8]:-aa+bb” or 13 to 15 is “1[3-5]:-aa+bb”.

Such as:

1. Rules: “0:|:0755”.
 - a. Input “02083185711”, output “02083185711”;
 - b. Input “83185700”, output “075583185700”.
2. Rules: “00:-00|0:-0+86|:+86755”.
 - a. Input “008522343318”, output “8522343318”;
 - b. Input “02083185711”, output “862083185711”;
 - c. Input “83185700”, output “8675583185700”.

3. Rules: "00:|0:-0+086|:~+0086755".
 - a. Input "008522343318", output "008522343318";
 - b. Input "02083185711", output "00862083185711";
 - c. Input "83185700", output "008675583185700".

4. Rules: "0:|1 [3-9]:+0|[2-8]:+0755|:~+0755".
 - a. Input "076322343318", output "076322343318";
 - b. Input "13044557766", output "013044557766";
or "13644557766", output "013644557766"
 - c. Input "23185700", output "075523185700".
Or "73185700", output "075573185700"

5.2. With a limited number of digit dialing rules

If you want to do restriction on every phone number, the dialing number of HT-3040 is configured as "AAXXXXXXX:-aa+bb", AAXXXXXXX is the matched number and its length. Other numbers are instead of "X" or "x" except of "AA"; In the back of colon is the corresponding concrete operation of this number.

The configurations as following:

Like the above 3. "00:|0:-0+0086|:~+0086755".

Change like this "00:|0:-0+0086|[1-8]xxxxxxx:~+0086755".

The length is 8 if you dial the number that the beginning are 1 to 8, the Gateway will dial the number automatically add "0086755". Or:

"0:|13:~+0|:~+0755"

Then add "0" in front of mobile number, and "0755" in front of city telephone number.

Change like this "0:|13 [0-9] xxxxxxx:~+0755"

This rule is like above, but the length of mobile number is limited 11.

As indicated above, the length of city telephone number is limited 8. 13[0-9] xxxxxxx and [1-8] xxxxxxx indict 130xxxxxxx to 139xxxxxxx and 1xxxxxxx to 8xxxxxxx.

Notes: After using the median number of definitions, the length of number is longer than the definition, then the superfluous numbers will be discarded, for example:

"0:|13[0-9]xxxxxxx:~+0|[1-8]xxxxxxx:~+0755"

The number is 075588990011.

6. Understand More

6.1. Gateway Initialization

When forget the password, users can press (more than 10 seconds) RESET or input *11983185922, restore factory configuration.

6.2. Advanced Configuration

There are many configuration option in the advanced configuration, such as Agent Services, Speech Coding sequence and so on, if you familiar with our product, you can configure directly, if not, please view our detailed description, or search our technology support: support@at338.com

6.3. Notes

a) When use the Gateway, please notice that outside whether overhead line or not, take measures of lightning (purchase Lightning All, or put Lightning Terminal on the Wire frame).

b) The Gateway has a certain degree of heat, please ventilation and do not cover flammable liquids.

c) The Gateway has line detection, if line is not connected well, then break when you dial the Gateway.

d) The Gateway has fat switch polarity detection function, which can prevent line hanging death and improve the Gateway's time to hang up.

e) When device is upgrading, please notice that **absolutely you can not turn off the power**, or, the device will scrap!